

**Menutree Website:**

 
- + Products / docu / downloads
- + Hardware
- + Web-Visualization
- + S7-VISU

**QR-Code Website:**



Please make sure to update your drivers before using our products.

Worldwide remote-access thanks to our own cloud

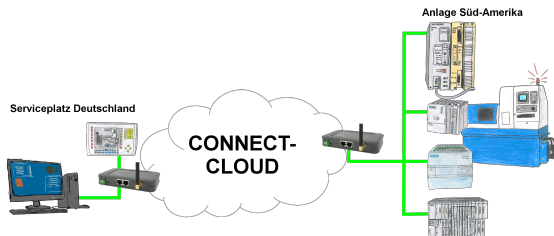


Worldwide remote-maintenance without additional costs thanks to our own cloud

Your devices connect to your own cloud, no matter where they are in the world. Only your devices are in your own private cloud, no one else has access to the cloud. In addition, you can provide each device with its own connection-password, so that the individual systems are protected despite the private cloud.

No registration on any portals, no hidden additional costs, your devices in your own cloud are always accessible.


This is how remote maintenance/remote access is fun.

## Serial communication with CP and more S5-assemblies

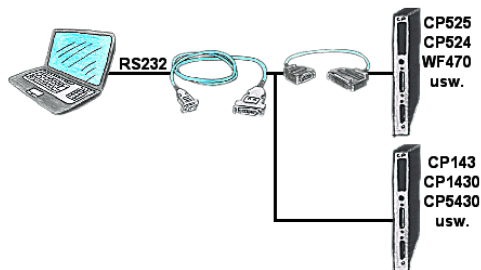 


You have a PC with programming software and a 9pin COM-port as interface? No problem, for this purpose the PG-UNI-II-cable is exactly the right product. Connect it to a Siemens assembly such as H1-CP (CP1430), WF470 and PC or CP-525 with the CP525-adapter and PC and you're Online.

## PD-interface of the S5-PLC already occupied (OEM-device)

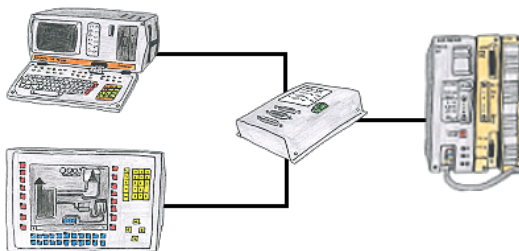 

Your PD-interface of the S5-PLC is already occupied with a panel and you should accomplish program modifications without removing the panel? No problem, connect the Multiplexer one-time to the PLC and then connect the panel and also your PC to the Multiplexer. Now you can work parallel with the PLC without the need of affecting the operation of the panel.

## Save time and money

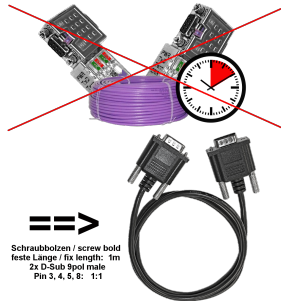 


Connect panel to PLC or PLC to PLC, why waste time and money unnecessarily?

Get an expensive bus-cable, screw the bus-connector and also make the classic mistake in the wiring (shield-connection to bus-line). Why all this effort when there is a ready-made solution:

MPI/Profibus-connection-cable with a length of 1m, cast D-Sub-housing with screw-bolts. Only the signals A + B (bus itself), ground and RTS-AS are 1to1 applied, so no problems with possible voltages, compensating currents.


Simply plug it on to the MPI- or Profibus-interface, screw it on and communicate.

## Easiest configuration by included webserver

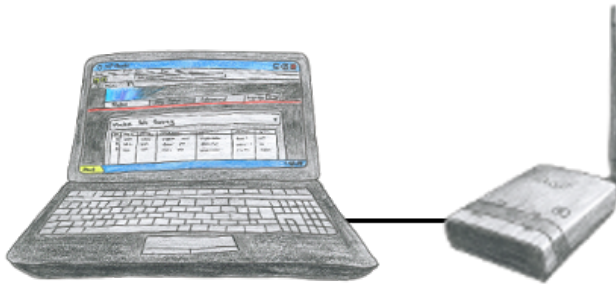 


To configure ALF you don't need additional driver or special cables, you connect your PC via LAN or WLAN with ALF and over the integrated webserver you can configure the needed function.

## Watching of S5-PLC's via LAN without Ethernet-CP

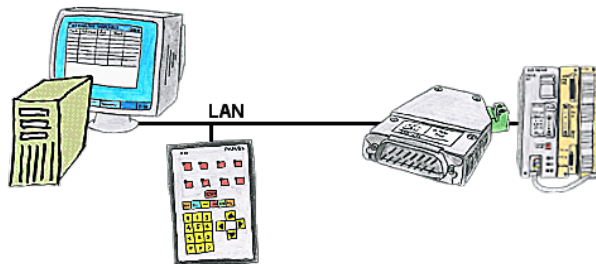 

Your panel only has a LAN-socket as PLC-interface, no problem. Connect this socket with the S5-LAN++ and plug it directly on the PD-interface of the PLC. Then access to the variables and data of the PLC is already available.

## Data backup S7-PLC PN-port on FTP-server

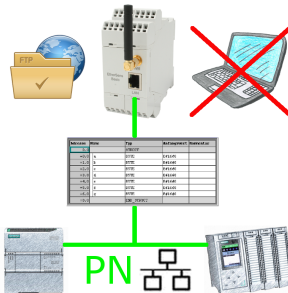 

S7-PLC triggered DB-backup/-restore without additional PC via PN-port on FTP-server