Handling-Short Instruction for

EtherSens-devices / MONI V1.1



The EtherSens devices and **MONI** are data loggers according to their specification. Either for digital or analog input- and output-signals, energy data or just as a pure messenger.

Commissioning of the device :

- EtherSens Bridge, EtherSens Control, Ethersens-ProSuite, EtherSens-ProSuite-LTE, MONI: Connect the voltage 24V DC \pm 20% to the labeled terminal connectors + 24V and GND
- EtherSens Energy, EtherSens Energy II, **MONI**: Connect the voltage 230V AC to the labeled terminal connectors L1 and N.

The device starts up now, you will see the status of the device on the two-color illuminated LED display:

UN	aevice ready
OFF	device executes a restart or is powered off
ON	device is booting
flashing at device boot	device is updating the firmware
flashing 0,5 Hz	device is logging data
fast flashing	output of error codes (see below)
	ON OFF ON flashing at device boot flashing 0,5 Hz fast flashing

List of error codes:

•	lx flash:	Initialization error of a sensor.
 2x flashes: 		Space on the SD card smaller than 1 Kilobyte
		or SD card removed without logging off.
•	3x flashes:	Error at last mail transfer (SMTP).
•	4x flashes:	Error at last time adjusting (NTP).
•	5x flashes:	No network connection available (only when there isn't a connection to the Access-Point and no LAN link state available).

If you want to reset your device, you must press and hold the reset-button FS when starting the device until the LED lights up green. On some devices, the button is operated using a paper-clip and is located on the bottom/back of the device.

With the EtherSens-ProSuite-LTE, the SIM-card is inserted in a de-energized state as follows:



Gently insert the SIM card until you feel resistance. When you let go of the card you will hear a quiet click. To release the card, push the SIM card back in until you feel resistance and then let go. The card will be ejected.

All EtherSens devices have a build in LAN and WLAN interface. The interfaces can be used at the same time.

WLAN-communication

The WLAN interface of the EtherSens devices/MONI creates an own network and working as Access Point from factory state. To connect your PC / Laptop to the network, open the network search and look at the network list.

Under the shown networks there should be a WLAN network named "EtherSens WiFi". Now you can connect to it. To access the website of the device you maybe have to change the network settings from your PC. If you have DHCP enabled, EtherSens gives your PC an IP address from the range 192.168.1.100 to 192.168.1.199. Alternatively you can give your PC a manual IP address which comes from the subnet 192.168.1.xxx. The IP address 192.168.1.58 can't be used because it's the default IP address of the WLAN interface of the EtherSens. On the web server you can change the settings for the WLAN interface. Thus you can connect the EtherSens with another Access-Point in your network. Furthermore it's possible to disable the complete WLAN interface. The WLAN module supports the channels 1 to 11 and can thus be used in Europe, America and other countries.

Important:

If EtherSens can't connect with your Access-Point please check if your Access-Point opens a network within the channel range named above. If the Access-Point opens a network in channel 12 or 13 please change the channel from your Access-Point.

LAN-communication

Connect the RJ45 plug from your PC with the RJ45 plug from your EtherSens device. Either you choose a patch cable or a cross link cable (with crossed pins). This is possible because the EtherSens device supports the Auto MDIX technology and can detect the transmit and receive direction by itself.

After the physical connection is done the EtherSens device can distribute an IP address to your PC. If you don't want to activate DHCP on your PC, you can give your PC an IP address from the subnet 192.168.1.xxx (range from 192.168.1.1 to 192.168.1.254). Do not give your PC the IP address 192.168.1.59, because this IP address is used by the LAN interface of the EtherSens.

Opening the device web-page

To open the web-server of the device you have to open your browser and tip in the IP address of the LAN or WLAN interface.

for WLAN:	192.168.1.58
for LAN:	192.168.1.59

Now the web-server of the EtherSens-device/MONI should show up with the following start-screen:

Aduet und Halory Discussiongen	E Agammang Li (mor) (c)	E terming 12 (mill())	E (parrieg 13 (mit) (r)
	E man () proj () (E montationage	E man 13 percept
	E Antenining 11 (199)	E Indefinition (12 (174)	E Interioritation 13 (1991)
	C measured to be	E manager of part	E manual () () (
	E materiary 11 (1997)	El Diseberargi L2 (MAR)	E Mandatanang L3 (1944)
	E totemorge (1 jobs) 8.20	E Schemenege Lt print	E Information (1.0 prim)
	E meterorgie Li (i) (rith)	E todoweyje 12 ja (103)	1 (University) (3.05 (2014)
	monocompa 11 () (1000)	E malanaga Li ji pulitik	E manage of general
	E Doterergie Li (I (100)	E todowegie 12 pl (colo)	E University's L3 (C) (2014)
	E monorpa to g pontej	E maaaaga Li gigaamiy 5.00	El monorque en géneration
	Consequence (1 perc)	Contragationer (2 proc.	0.00
	E Intelespera (re)	E Inser State (4)	
	Televise Theode	C marylades	
	Degrams anhabers	Normer Normer Chronicae	

The view of the start page can vary by different device types or versions. The picture above shows the start page of a EtherSens Energy device.

More about the EtherSens-devices/MONI as well as the current device manual or the current firmware file can be found under

https://www.tpa-partner.de

(c) copyright 2000-2025 by TPA

Menutree Website:

- + Products / docu / downloads
 - + Hardware
 - + Analysis technic
 - + EtherSens
 - + EtherSens Oxygen

QR-Code Website:





Please make sure to update your drivers before using our products.

Independent operation through power-pack-supply



You want for e.g. moving around your system/control and need a 24V-DC-supply for your access-point ALF-UA?

With USB-power-cable and a USB-power-bank/-accu, the problem can be solved immediately with little effort.