



# handling-short instruction for Multi-Prommer V1.2

## Interface-Overview:

Front-Side:

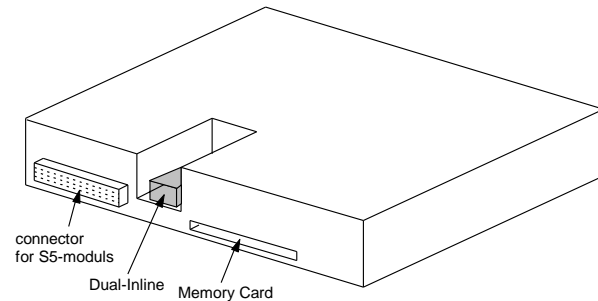

Back-Side:

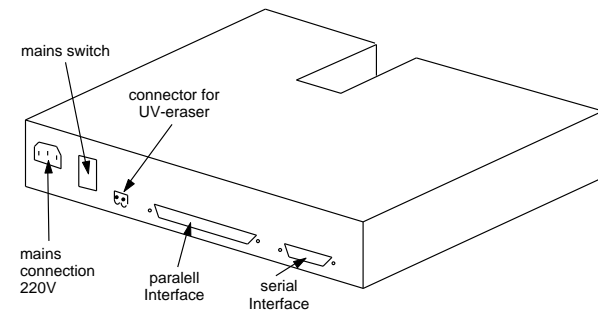

## Connectors:

### RS232:

The 9pin female Connector has following pining:

Pin	short name	Description
2	RxD	receiver PC-side
3	TxD	transmit PC-side
5	GND	ground signal
7	RTS	request to send
8	CTS	clear to send

### Parallel-Interface:

Pin	short name	Description
1	ACK	acknowledged
2	D0	data bit 0
3	D1	data bit 1
4	D2	data bit 2
5	D3	data bit 3
6	D4	data bit 4
7	D5	data bit 5
8	D6	data bit 6
9	D7	data bit 7
10	STB	strobe
11	INIT	initialize
12	AFD	append auto-form-feed
13	SLIN	selection input
14	PE	paper empty
15	ERR	error
16	BUSY	busy
17	SLCT	select
18 – 25	GND	ground signal

### Power Supply:

The Multi-Prommer needs a power supply of 230V AC with a tolerance of  $\pm 15\%$ . The connection should be made with the delivered cable. The Multi-Prommer is also reachable with 115V AC, ask your dealer.

### Software-installation:

Download the WinPromm-software from the mentioned website and start the installation. Follow the Install-Shield.

### Menu-structure:

File	New Open Save Save As Printer configuration Exit
View	Toolbar Status line
Module	

	Select Read Write Write too Blanktest Compare Block list Erase
Configuration	Interface Language Word/Block SYSID Display checksum
Window	Overlapped Side-by-side Top-on-top Group symbols
Help	Contents Usage of help Introduction Version-history About WinPrommer
Block	All None Exchange

### File-formats:

*.*	All Files. It is tried to choose a file-format according the extension. If no appropriate file-format is found, the binary format is used
*.BIN	Binary File
*.S5D	Step-5 File
*.S7P	Step-7 File (structure)
*.308	ET-100 File
*ET.200	ET-200 File
*.2BF	ET2-Binary Export
*.HEX	Intel-Hex-Format
*.EPR	Motorola-Hex-Format
*.525	CP-525/524 Files
Q*.*	CP-5431 File
A*.*	CP-1430/CP-143 File

### Technical data:

Size (S x H x D):	245 x 47 x 187mm
Case-Type:	metal casing, powder-coated

For more Information of the Multi-Prommer or to get the actual Manual or the actual operating software WinPrommer, you get the information under:

[www.tpa-partner.de/wprommer.htm](http://www.tpa-partner.de/wprommer.htm)