Handling-Shortinstruction for

AC adapter




Important instructions:

Please read user instructions before use. Always observe these instructions. This unit should be only operated at an ambient temperature between 0°C to 45°C up to 95% relative humidity, no condensation.

Mounting the primary plug

The primary plug is interchangeable. This allows a worldwide use. The procedure of changing the plugs is as per the pictures.

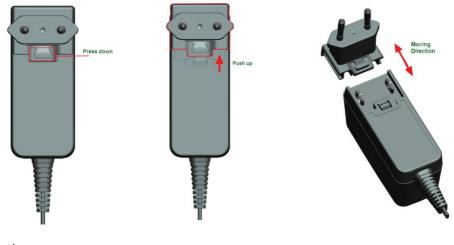

Pinning: Red wire end ferrule: Black wire end ferrule: (c) copyright 2000-2025 by TPA

Menutree Website:

+ Products / docu / downloads + Accessories + Connector / Power supply + AC adapter

QR-Code Website:





Please make sure to update your drivers before using our products.

Remote-maintenance Siemens-S7-PLC with PN-Port with firewall




Remote-maintenance of a Siemens-controller with network-connection via secure VPN-tunnel and scalable firewall

Profinet-panel directly on S5-PLC



Replace defective panels in your "old" S5-systems with current and available S7-panels To do this, simply insert a placeholder PLC (e.g. 315-2-PN / DP) in the WinCC-project, the IP-address of the PLC corresponds to the IP-address of the S5-LAN++-module. You can then visualize the data as usual.

At the same time, the PLC can also be programmed/monitored via the network.

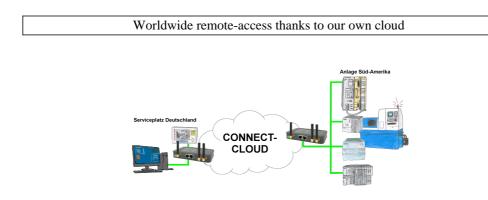

Worldwide remote-maintenance without additional costs thanks to our own cloud

Your devices connect to your own cloud, no matter where they are in the world. Only your devices are in your own private cloud, no one else has access to the cloud. In addition, you can provide each device with its own connection-password, so that the individual systems are protected despite the private cloud.

No registration on any portals, no hidden additional costs, your devices in your own cloud are always accessible.

This is how remote maintenance/remote access is fun.



Move wirelessly around the Pilz-PLC and communicate for example ONLINE in the status

Operation via web-browser



To parameterize the EtherSens-device you dont need a special PC or laptop with special software. Just open with your internet-browser the web-page of the device.