


Handling-Shortinstruction for

AC adapter

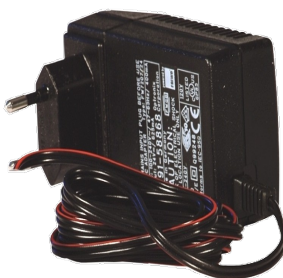


Important instructions:

Please read user instructions before use. Always observe these instructions.

This unit should be only operated at an ambient temperature between 0°C to 45°C up to 95% relative humidity, no condensation.

Mounting the primary plug

The primary plug is interchangeable. This allows a worldwide use. The procedure of changing the plugs is as per the pictures.

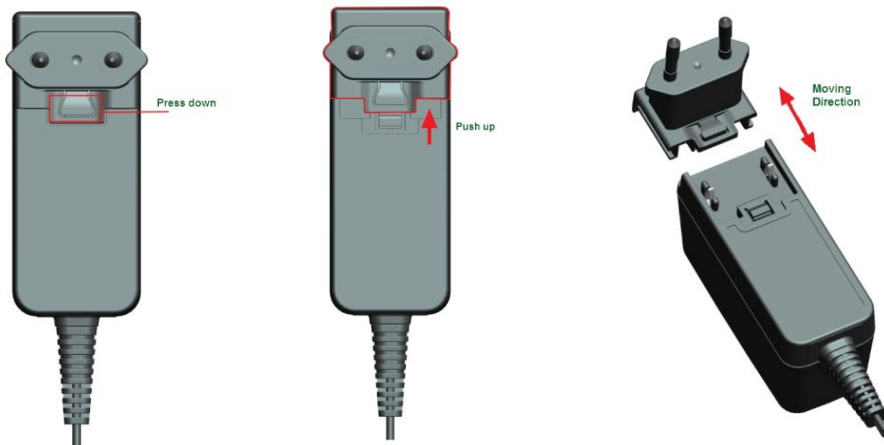

Pinning:

Red wire end ferrule: +24V DC
Black wire end ferrule: 0V (Ground)

Menutree Website:


- + Products / docu / downloads
- + Accessories
 - + Connector / Power supply
 - + AC adapter

QR-Code Website:




Please make sure to update your drivers before using our products.

Integrated phone-book

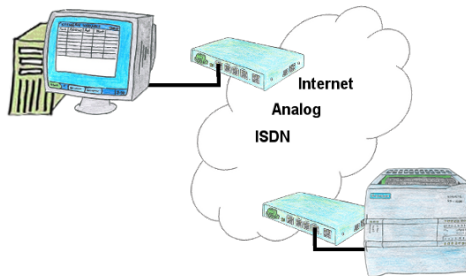


You have to consider several facilities and do not want to keep a watch list with phone numbers? No problem, the TELE-router contains a phone book, so you any time maintain the entire data connection in the router and build to the opposite side by clicking the link in the web browser.

Protection for data-dump and modification

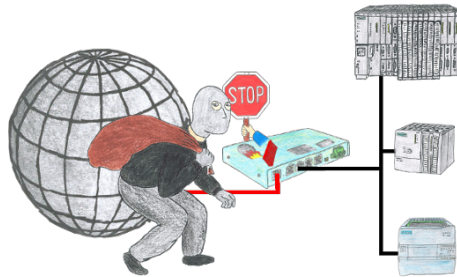

You want to protect your system against unauthorized access and changes? No problem, with the S7-firewall you secure your system against unauthorized access and thus prevent deduction or alteration of your system and process data.

Take over control-tasks

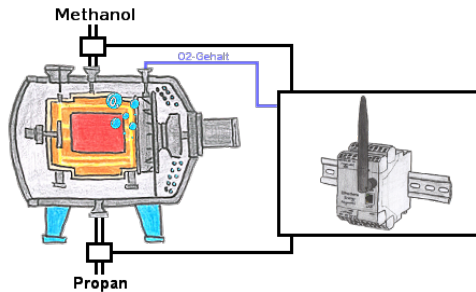

Capture with the Ethersens-device not only your process-values, you would be able to do control-tasks with the device.

S7-PLC over USB




Communication with S7-PLC via USB, just how and with what?

Data-communication with S7-PLC from PC or other devices via USB, which interface is required. Questions you don't have to worry about. With "S7 over USB" you get the right interface-products for PPI, MPI and Profibus.

Which one you use then is up to you.

S7-300/400 (MPI/DP) to S7-300/400 (MPI/DP)

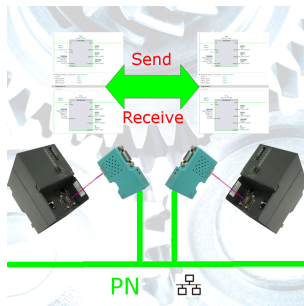

Coupling S7-controller with MPI/Profibus at S7-controller with MPI/Profibus via network