



handling-short instruction for Multi- Prommer V1.3

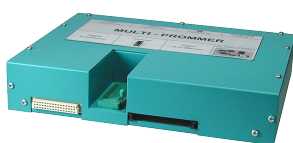


Interface-Overview:

Front-Side:

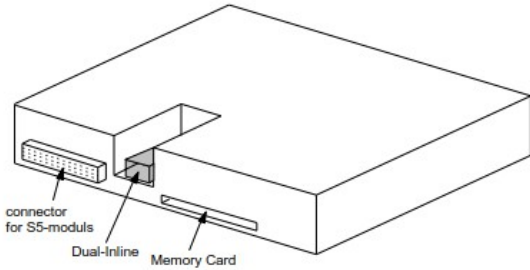

Back-Side:

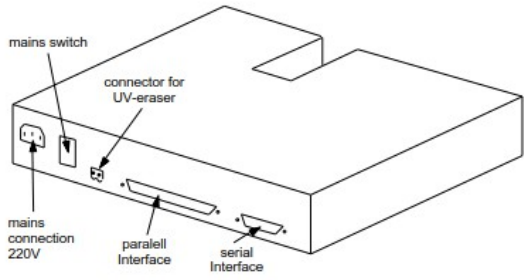

Connectors:

RS232:

The 9pin female Connector has following pining:

| Pin | short name | Description |
|-----|------------|------------------|
| 2 | RxD | receiver PC-side |
| 3 | TxD | transmit PC-side |
| 5 | GND | ground signal |
| 7 | RTS | request to send |
| 8 | CTS | clear to send |

Parallel-Interface:

| Pin | short name | Description |
|---------|------------|-----------------------|
| 1 | ACK | acknowledged |
| 2 | D0 | data bit 0 |
| 3 | D1 | data bit 1 |
| 4 | D2 | data bit 2 |
| 5 | D3 | data bit 3 |
| 6 | D4 | data bit 4 |
| 7 | D5 | data bit 5 |
| 8 | D6 | data bit 6 |
| 9 | D7 | data bit 7 |
| 10 | STB | strobe |
| 11 | INIT | initialize |
| 12 | AFD | append auto-form-feed |
| 13 | SLIN | selection input |
| 14 | PE | paper empty |
| 15 | ERR | error |
| 16 | BUSY | busy |
| 17 | SLCT | select |
| 18 – 25 | GND | ground signal |

Power Supply:

The Multi-Prommer needs a power supply of 230V AC with a tolerance of $\pm 15\%$. The connection should be made with the delivered cable. The Multi-Prommer is also reachable with 115V AC, ask your dealer.

Software-installation:

Download the WinPromm-software from the mentioned website and start the installation. Follow the Install-Shield.

Menu-structure:

| | |
|---------------|-----------------------|
| File | New |
| | Open |
| | Save |
| | Save As |
| | Printer configuration |
| | Exit |
| View | |
| | Toolbar |
| | Status line |
| Module | |
| | Select |
| | Read |
| | Write |
| | Write too |
| | Blanktest |
| | Compare |
| | Block list |
| | Erase |
| Configuration | |
| | Interface |
| | Language |
| | Word/Block |
| | SYSID |
| | Display checksum |
| Window | |
| | Overlapped |
| | Side-by-side |
| | Top-on-top |
| | Group symbols |

Help

- Contents
- Usage of help
- Introduction
- Version-history
- About WinPrommer

Block

- All
- None
- Exchange

File-formats:

| | |
|---------|---|
| *.* | All Files. It is tried to choose a file-format according the extention. If no appropriate file-format is found, the binary format is used |
| *.BIN | Binary File |
| *.S5D | Step-5 File |
| *.S7P | Step-7 File (structure) |
| *.308 | ET-100 File |
| *ET.200 | ET-200 File |
| *.2BF | ET2-Binary Export |
| *.HEX | Intel-Hex-Format |
| *.EPR | Motorola-Hex-Format |
| *.525 | CP-525/524 Files |
| Q*.* | CP-5431 File |
| A*.* | CP-1430/CP-143 File |

Technical data:

| | |
|-------------------|-----------------------------|
| Size (S x H x D): | 245 x 47 x 187mm |
| Case-Type: | metal casing, powder-coated |

For more Information of the Multi-Prommer or to get the actual Manual or the actual operating software WinPrommer, you find the information under

<https://www.tpa-partner.de>

(c) copyright 2000-2025 by TPA

Menutree Website:

- + Products / docu / downloads
- + Hardware
 - + Memory modules / Prommer
 - + MULTI-PROMMER

QR-Code Website:



Please make sure to update your drivers before using our products.

Remote-maintenance Beckhoff-PLC



Remote-maintenance of a Beckhoff-controller with network-connection via secure VPN-tunnel of the TeleRouter