

Via digital input triggered DB-backup/-restore without additional PC via MPI/Profibus to FTP-server

## S7-PLC over RS232




Communication with S7-PLC via RS232 (COM-port), just how and with what?

Data-communication with S7-PLC from PC or other devices via RS232, which interface is required. Questions you don't have to worry about. With "S7 over RS232" you get the right interface-products for PPI, MPI and Profibus.


Which one you use then is up to you.

## Data backup S5-PLC on FTP-server via dig. IO

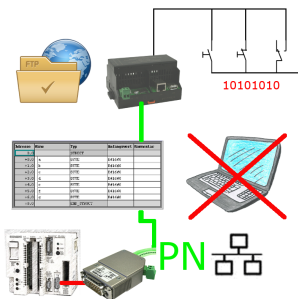

Via digital input triggered DB-backup/-restore without additional PC via PG-socket and Ethernet to FTP-server

## Interface-products for S7-PLC

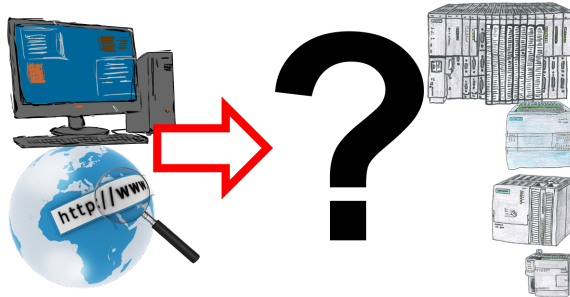


Communication with S7-PLC, just how and with what?

Data communication with S7-PLC from PC or other devices, which interface fits on/to my controller. All questions you don't have to worry about. With "Programming adapter S7" you get the right interface for PPI, MPI and Profibus.

Select the interface of your PC or device (serial via COM-port, USB, Ethernet (network), WIFI) and you will be shown the possible products.


Which one you use then is up to you.

## Programming of S5-PLC above H1-, L1- or L2-Bus

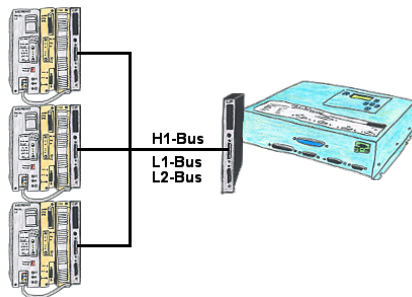

You have an existing L1-, L2- or H1-bus on the customer side and have to program parallel the PLCs? No problem, just connect the communication processor (CP) with a monkey swing to the PLC, the Tele-Network-device with the TELE-CP-cable to a free CP and select the needed PLC with PG-path selection. Therefore the L1-, L2- or H1-option is needed.


## Automatical backup of your PLC

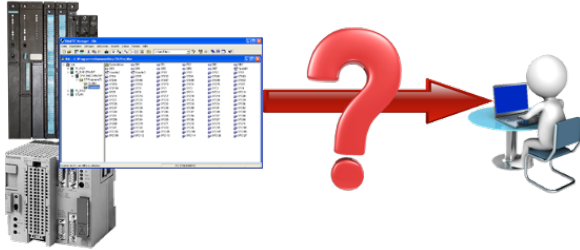

Guaranteeing security against production-downtimes through regular backups of S5- or S7-PLCs on your PC. S5/S7/H1-backup/restore-software saves all projected controls at a predetermined time. Whether every minute, hourly, daily, weekly or once a month, the PLC is completely read out and saved on the hard-disk/network-drive of the computer.

If the backup-battery fails or the PLC is damaged, you can use this backup-file to restore the PLC.

## Many PLC-devices conflated

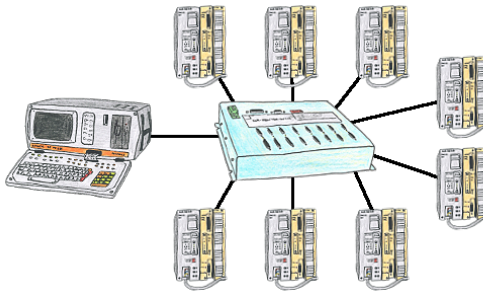

You have many PLC and you want to programm them central on one place? No problem, you have to connect them all to the KOR/MUX-Tele-Switch an with the PD-bus-selection of your Step5-software you go ONLINE. Of course the KOR/MUX-Tele-Switch is cascable, so you can connect up to 30 PLCs to the devices.