

Menutree Website:


- + Products / docu / downloads
- + Accessories
 - + Antennas / Accessories
 - + Sector antenna for ALF

QR-Code Website:



Please make sure to update your drivers before using our products.

Worldwide remote-access thanks to our own cloud

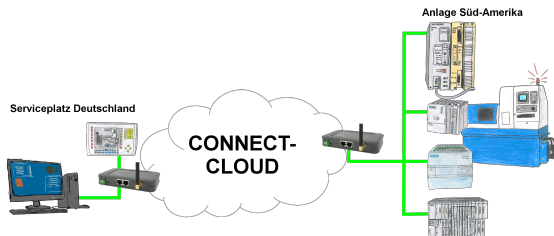


Worldwide remote-maintenance without additional costs thanks to our own cloud

Your devices connect to your own cloud, no matter where they are in the world. Only your devices are in your own private cloud, no one else has access to the cloud. In addition, you can provide each device with its own connection-password, so that the individual systems are protected despite the private cloud.

No registration on any portals, no hidden additional costs, your devices in your own cloud are always accessible.

This is how remote maintenance/remote access is fun.

Data backup S5-PLC on USB-stick via dig. IO

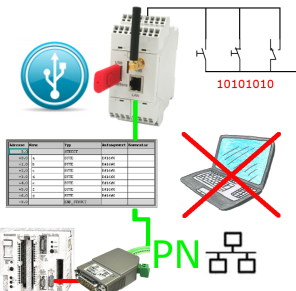

Via digital input triggered DB-backup/-restore without additional PC via PG-socket and Ethernet to USB-stick

Detect and alarm Profinet burglary



Recognize cable breakage, contact problems and line faults.
Retransmissions and failures are logged and reported.
Early acting before total failure of the participant.

Remote-maintenance Beckhoff-PLC with firewall



Remote-maintenance of a Beckhoff-controller with network-connection via secure VPN-tunnel and scalable firewall

S7-PLC over RS232



Communication with S7-PLC via RS232 (COM-port), just how and with what?

Data-communication with S7-PLC from PC or other devices via RS232, which interface is required. Questions you don't have to worry about. With "S7 over RS232" you get the right interface-products for PPI, MPI and Profibus.


Which one you use then is up to you.

Wireless around the machine with LAN-port



Move wirelessly around the machine with LAN-port and communicate for example ONLINE in the status

Remote maintenance / telecontrol of PLC-devices

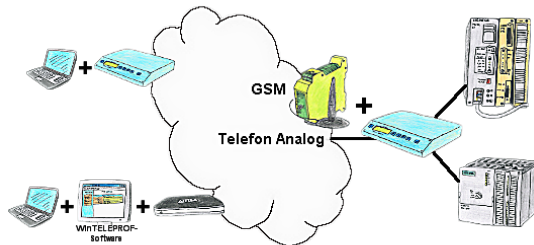

Access to the connected PLC takes place by coupling via Analogue-, ISDN- (only with AB-adapter) and GSM-(only with external GSM-modem)-line.