


# Handling short instructions for PLC coupling

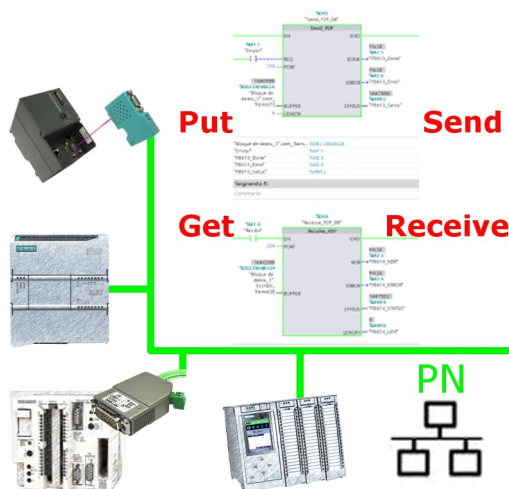

## Commissioning of S5-LAN++ and S7-LAN

Before you can start with the configuration of the coupling you should first set up your S5-LAN++ (to access your S5 controller via the PG interface) and / or S7-LAN (to access your S7 controller via PPI/MPI/Profibus) modules. For this please read the short instructions for the S5-LAN++ or S7-LAN.

## Configure coupling

The S5-LAN++ and S7-LAN are supporting multiple couplings. In general a distinction is made between a active controller, which establishes and manages the connection, and a passive controller, which waits for the connection and queries.

For the coupling type “PUT/GET” a change is only needed on the active controller, because here flags and data blocks from the passive controller are directly accessed by the active controller.

For the coupling type “SEND/RCV” a change on both controllers is needed.

The following table shows a overview about possible couplings between controllers and shows up, where you can find more information about the configuration of the coupling. All descriptions and example applications can be downloaded on the product page of the S5-LAN++ and S7-LAN.

controller 1 (active)	controller 2 (passive)	coupling type	description / example
S7-200 via PPI	<i>any</i>	PUT/GET	project „S7-LAN_PUT-GET“
	S7-200 via PPI	SEND/RCV	project „S7-LAN_SEND-RCV“
S7-300/400 via MPI/DP	<i>any</i>	PUT/GET	project „S7-LAN Aktives PUT-GET“
	S7-300/400 via MPI/DP	SEND/RCV	project „S7-LAN an S7-LAN“
	S5 via PG port	SEND/RCV	project „S5-LAN++ an S7-LAN“


<b>controller 1 (active)</b>	<b>controller 2 (passive)</b>	<b>coupling type</b>	<b>description / example</b>
S7-300/400 via Ethernet-CP	S7-200/300/400 via PPI/MPI/DP	PUT/GET	S7-LAN manual section „Access via PUT/GET“
	S7-300/400 via MPI/DP	SEND/RECV	project „S7-LAN an S7-CP“
	S5 via PG port	PUT/GET	S5-LAN short instruction „S5-S7-coupling“
	S5 via PG port	SEND/RECV	Project „S5-LAN++ an S7-CP“
S7-1200/1500 via Ethernet	S7-200/300/400 via PPI/MPI/DP	PUT/GET	S7-LAN manual section „Access via PUT/GET“
	S5 via PG port	PUT/GET	S5-LAN short instruction „S5-S7-coupling“
S5 via PG port	S5 via PG port	SEND/RECV	project „S5-LAN++ an S5-LAN++“

For every example project shown in the table above there is also a description of the project. For S5 couplings this can be found within the ZIP archive with the example projects and for S7 couplings within the manual of the S7-LAN module.

**Menutree Website:**


- + Products / docu / downloads
- + Applications
- + PLC-Coupling

**QR-Code Website:**

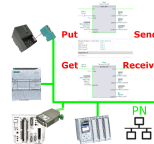

Please make sure to update your drivers before using our products.


**Passive PoE**

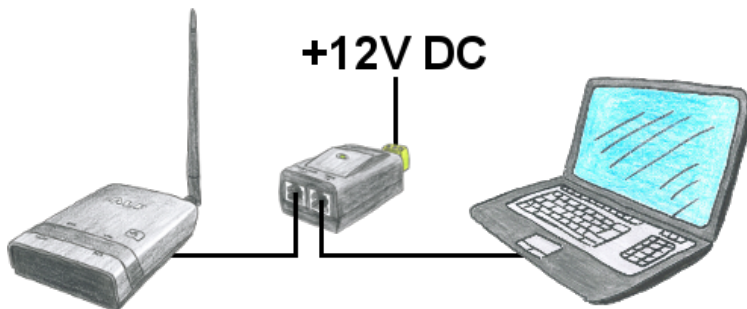

You dont want to power ALF with 24V DC because you have in your network PoE "Power over Ethernet" in use. No problem, ALS provides passive PoE, this means he can be powered with the not used cables of the lan-cable with 12V DC. You dont need additional the 24V DC.


Attention:Dont connect a PoE-cable to a lan-client which dont provides PoE! The device could be damaged!

## Remote maintenance / telecontrol of PLC-devices

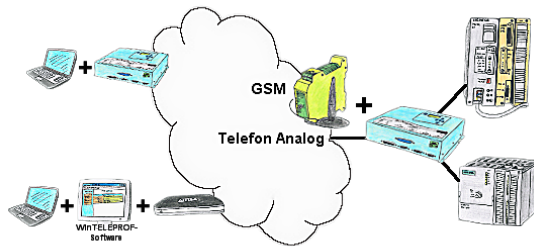

Access to the connected PLC takes place by coupling via Analogue-, ISDN- (only with AB-adapter) and GSM-(only with external GSM-modem)-line.

## Serial programming of the S7- PLC

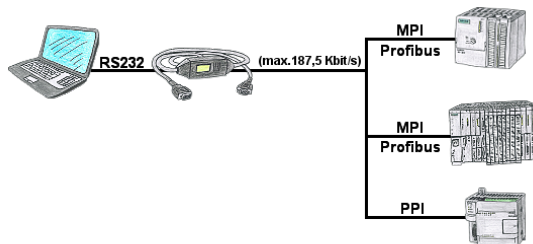

With the MPI/PPI-cable you have the ability to access a connected SPC-PLC S7-200 (PPI 9600 Baud and 19200 Baud) as well as S7-300/400 (MPI/Profibus 9600 Baud up to 187500 Baud) via PC serial with up to 115200 Baud for reading respectively writing of data.