


Handling-short-instruction V1.0 for

ALF-UA industrial Wifi-router


Connectors:

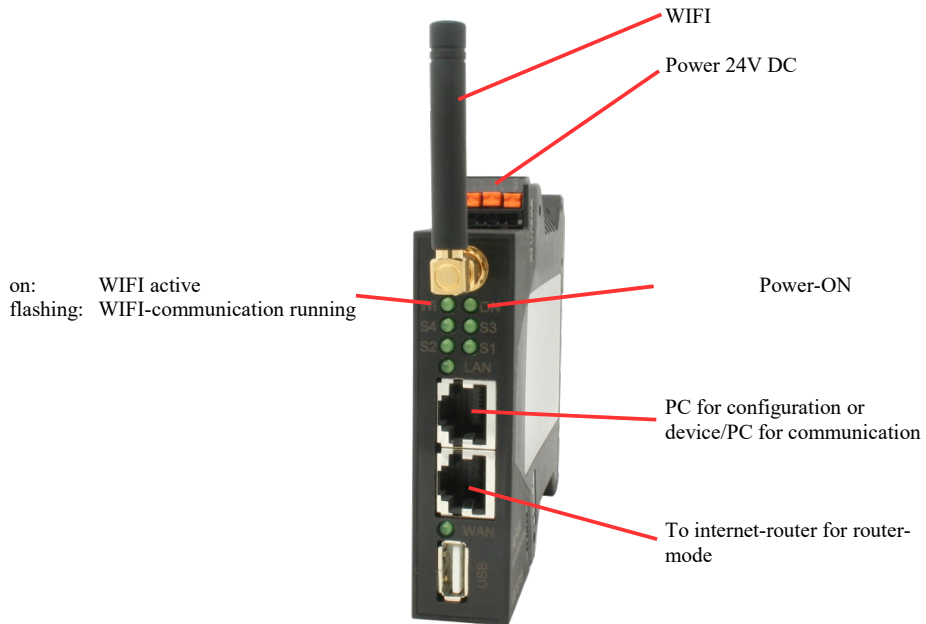

Power connection:

Voltage: 24 V DC \pm 20%
Power: 1,2W

Pinning voltage connector:

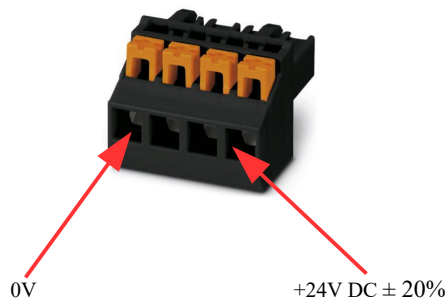

Initial start-up:

- ALF-UA creates a WLAN network with an SSID „ALF-UA“ with active DHCP master (laptop is automatically assigned an IP address)
- Connect laptop to this WiFi network and open with browser webserver with IP: <http://192.168.2.1>

or

- Connect the PC to the LAN port using a LAN cable
- PC must be in the 192.168.2.xxx subnet
- Open with browser the webserver with IP: <http://192.168.2.1>

User name: admin
Password: admin

Home page :

The screenshot shows the 'Overview' page of the ALF-UA interface. It includes a sidebar with icons for STATUS, Overview, and a settings icon. The main content area is divided into two sections: 'Service' and 'WAN / Internet' and 'LAN / Local Network'. The 'Service' section lists: Device Name: ALF-UA, Serialnumber: -, Version: FW 0.0.0.0, Network Mode: AP Router, CPU Load Averages: 25.27%, and Memory Usage: 27064 KB / 61440 KB. The 'WAN / Internet' section shows: P Address: - and Subnet Mask: -. The 'LAN / Local Network' section shows: P Address: 192.168.2.1 and Subnet Mask: 255.255.255.0.

Menu network :

4 operating modes are possible with the ALF-UA :

- AP Router is an access point with LAN and WAN port (separate subnets)
- AP Bridge is ACCESS-Point with 2 LAN sockets (WIFI and LAN sockets bridged)
- Client Router is WIFI client with LAN and WAN port (separate subnets)
- Client Bridge is WIFI client with 2 LAN sockets (WIFI and LAN sockets bridged)

==> Access point opens a WIFI network, client connects to an existing WIFI network .

All 4 modes can be parameterized and saved in parallel, you determine which mode is active :

The screenshot shows the 'NETWORK' configuration page for the 'AP Router' mode. The left sidebar has icons for AP Router, AP Bridge, Client Router, and Client Bridge. The main content area is divided into two sections: 'WAN / Internet' and 'LAN / Local Network'. The 'WAN / Internet' section shows: Connection Type: Static (selected), DHCP (disabled), PPPoE (disabled), Host Name: ALF-UA, DNS Server: K Default (selected), Open DNS (disabled), Google DNS (disabled), Custom (disabled), and Routing to LAN: [checkbox]. The 'LAN / Local Network' section shows: Router IP: 192.168.2.1, Subnet Mask: 255.255.255.0, Spanning Tree: [checkbox], DHCP Settings: Disabled (selected), DHCP Server (disabled), Local Domain Name: (optional), Start IP: 192.168.2.100, End IP: 192.168.2.200, and Gulligheidsdauer: 12 Hours, WLAN Access Point: Enabled (selected), Access Point SSID: ALF-UA, Broadcast SSID: [checkbox], Encryption Settings: WPA2 PSK (selected), WPA PSK, WEP, WPA Radius, and WPA2 Radius, and Routing to WAN: [checkbox].

You need the following modes for the following situations :

Situation	AP Router	AP Bridge	Client Router	Client Bridge	Peculiarity
With a laptop around the S5/7-PLC + ALF-UA	X	---	---	---	PLC via S5/7-LAN to LAN port
With a laptop around the S5/7-PLC + ALF-UA	---	X	---	---	PLC via S5/7-LAN to LAN port Another LAN participant on the WAN port
Bring the S5/7-PLC or LAN device into the existing WIFI network	---	---	X	---	PLC via S5/7-LAN / LAN-device on LAN port
Bring the S5/7-PLC or LAN device into the existing WIFI network	---	---	---	X	PLC via S5/7-LAN / LAN-device on LAN port Another LAN participant on the WAN port
Extend LAN route Attention: 2 devices required		X		X	One device as AP Bridge and the second as Client Bridge

After selecting the configuration, save it in the device and after restarting the device, it can be used in the selected operating mode.

You can find more about the operating modes in the device manual on the product page of the ALF-UA .

<https://www.tpa-partner.de>

(c) copyright 2000-2025 by TPA

Menutree Website:


- + Products / docu / downloads
- + Hardware
 - + Programming devices
 - + Programming adapter S7
 - + WLAN/WIFI
 - + Profinet PLCs / Ethernet-CPs
 - + ALF-Devices
 - + ALF-UA table version

QR-Code Website:



Please make sure to update your drivers before using our products.

Network your controls and increase the availability of backups

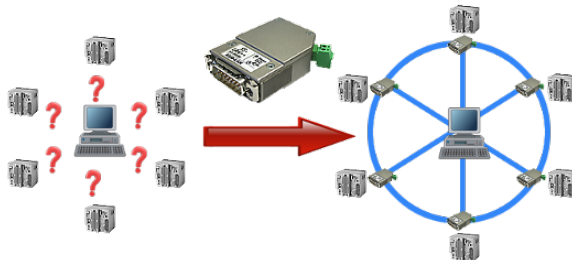

Your machines are fully distributed in your company area, it is not always a PC connected with the machine. What could be better than to connect the machines to your company network and backup the data central from one point!

With the option "Communication via S5-LAN++" and the S5-LAN++-modules, you can meet this requirement immediately.