


Handling-Shortinstruction V1.0 for CONNECT-HS-Router + CONNECT-Router industrial WiFi-router


Connectors:

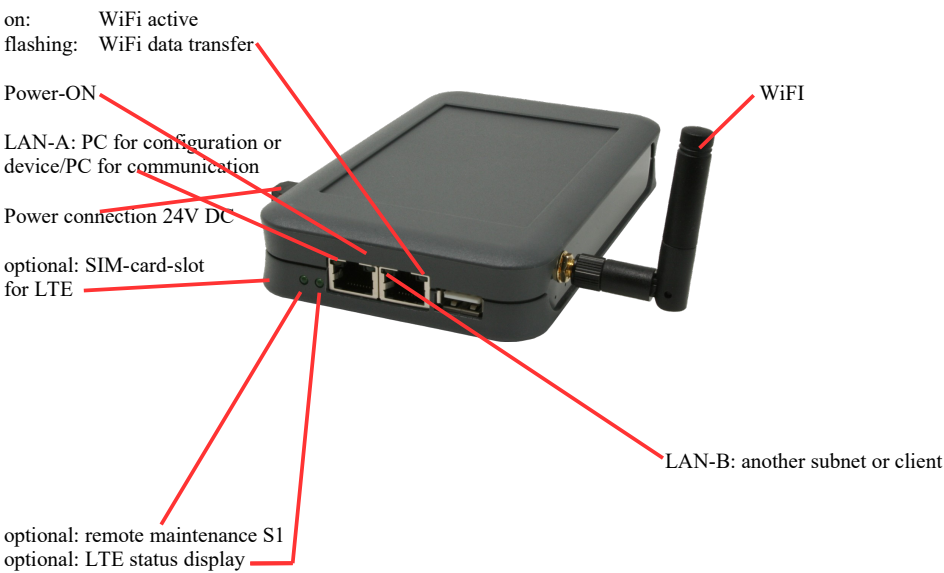

Power connection :

Voltage: 24 V DC \pm 20%
power consumption : 1,2W

Assignment of voltage plug :

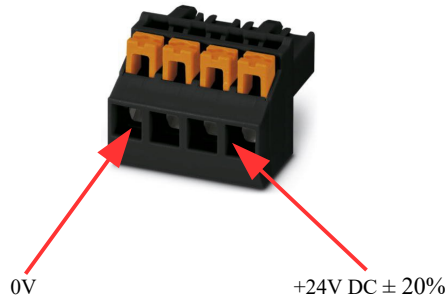

Initial start-up:

- CONNECT-Router creates a WLAN network with an SSID „CONNECT WiFi“ with active DHCP master (laptop is automatically assigned an IP address)
- Connect laptop to this WiFi network and open with browser webserver with IP: <http://192.168.2.1>

or

- Connect the PC to the LAN port using a LAN cable
- PC must be in the 192.168.2.xxx subnet

Starting page:

commissioning

Before you can start to use the device you will have to set up some basic settings. Afterwards your device will be immediately ready for the communication.
On the page "configuration" you can change these as well as some further settings at any time.

basic configuration

In the first step you have to specify how you want to use your device.
Specifying the name is optional.

device name:

operation mode: ☒ Bridge
☐ Router

next

Basic configuration:

Assign a name to the device for identification

2 operating modes are possible with the CONNECT-Router :

- Bridge Multiple interfaces connected to a common network
- Router Separation between LAN and WAN (Internet) network

For operation mode Bridge:

LAN configuration
In the last step you have to configure how your device should be connected with the local network.

interfaces: ☒ LAN-A
☒ LAN-B
☒ WLAN

IP settings

IP configuration: ☐ DHCP
☒ manually
DHCP server: ☒ enable
IP address:
subnet mask:

WLAN settings

search:
mode:
SSID:
security type:
channel:

LAN configuration:

Determine the interfaces that should be bridged

IP settings:

- IP configuration: DHCP (parameters come from a DHCP master on the network)
Manual (IP address + subnet mask fields must contain valid values)
- DHCP server: Device is a DHCP server on the selected interfaces
- IP address: IP address of the device
- subnet mask: Subnet mask of the device

WLAN settings:

- Search: Searches for accessible WiFi networks and lists them. By clicking on an entry, the selected WiFi network is used for connection
- Modus: Access-Point (AP) [the CONNECT-Router opens its own WiFi]
Client [the CONNECT-Router connects to an existing WiFi network]
- SSID: Name of the connected or created network
- Sicherheitsstufe: Open (no encryption)
WEP (either 5 or 13 ASCII/10 or 26 hexadecimal characters)
WPA (8-64 ASCII characters)
WPA2 (8-64 ASCII characters)
WPA/WPA2 8-64 ASCII characters (Independent automatic selection whether WPA or WPA2)
- Kanal: Selection of the connection channel

for operation mode Router:

WAN configuration

Next you have to configure how your device should be connected with the internet / WAN.

WAN interface: LAN-A ▾

IP settings

IP configuration: ☐ DHCP
☒ manually

IP address:

subnet mask:

gateway address:

back

next

WAN interface:

IP settings:

- IP configuration:

- IP address:

- subnet mask:

- gateway address:

Set the WAN interface from LAN-A, LAN-B oder WLAN

DHCP (Parameters come from a DHCP master on the network)

Manuell (fields IP Address + Subnet Mask + Gateway Address must contain valid values)

IP address of the device

Subnet mask of the device

Gateway address of the device

LAN configuration:

Determine the interfaces that should be connected to the local network

LAN configuration

In the last step you have to configure how your device should be connected with the local network.

interfaces: ☒ LAN-B
☒ WLAN

IP settings

IP configuration: ☐ DHCP
☒ manually

DHCP server: ☒ enable

IP address:

subnet mask:

WLAN settings

search: start search

mode: Access Point (AP) ▾

SSID: CONNECT WIFI

security type: open ▾

channel: auto channel ▾

back

save

IP settings:

- IP configuration: DHCP (Parameters come from a DHCP master on the network)
Manuell (fields IP address + subnet mask must contain valid values)
- DHCP-Server: Device is a DHCP server on the selected interfaces
- IP address: IP address of the device
- subnet mask: Subnet mask of the device

WLAN settings:

- Search: Searches for accessible WiFi networks and lists them; by clicking on an entry, the selected WiFi network is used for connection
- Modus: Access-Point (AP) [the CONNECT-Router opens its own WiFi]
Client [the CONNECT-Router connects to an existing WiFi network]
- SSID: Name of the connected or created network
- Sicherheitsstufe: Open (no encryption)
WEP (either 5 or 13 ASCII/10 or 26 hexadecimal characters)
WPA (8-64 ASCII characters)
WPA2 (8-64 ASCII characters)
WPA/WPA2 8-64 ASCII characters (Independent automatic selection whether WPA or WPA2)
- Kanal: Selection of the connection channel

By “Save” the selected configuration is adopted. The device is ready for use in the specified operating mode after a short waiting period (maximum 10s).

You need the following operating modes for the following situations :

Situation	Operating mode	WLAN mode	Particularities
With a laptop around the S5/7 PLC + CONNECT-Router	Bridge	Access-Point	PLC via S5/7 LAN on LAN-A port, additional LAN participants on LAN-B port
Bring S5/7-PLC or LAN-participants into the existing WiFi network	Bridge	Client	PLC via S5/7-LAN / LAN-participant on LAN-A port, additional LAN-participant on LAN-B port
Create a separate subnet for connected devices	Router	Access-Point	LAN-A port to the company network, LAN-B port + WLAN to the machine network (Don't forget routes in the company network)
Extend LAN route Attention: 2 devices are required	Bridge	1. device Access-Point 2. device Client	One device as AP and the second as client

After selecting the configuration, save it in the device and after a short initialization time (max. 10s) the devices are ready for operation.

You can find out more about the operating modes in the device manual on the CONNECT-Router product page.

(c) copyright 2000-2025 by TPA

Menutree Website:


- + Products / docu / downloads
- + Hardware
 - + Router 3G / WLAN/WIFI
 - + CONNECT-Router-devices
 - + CONNECT-Router

QR-Code Website:



Please make sure to update your drivers before using our products.

Occupied programming interface => does not have to be

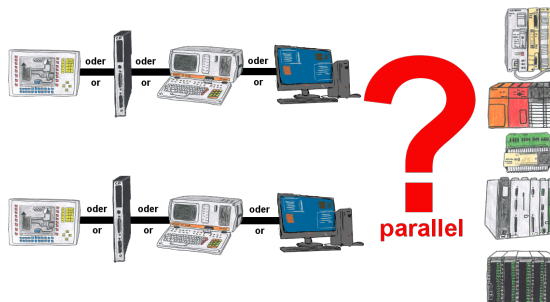


Your Programming-interface of the PLC is already occupied with a panel or PC or communication-processor?

You should accomplish program modifications without removing the other communication-partner? You connect the PLC-specific Multiplexer one-time to the PLC and then connect the communication-partner and also your PC. Now you can work parallel with the PLC without the need of affecting the operation/communication of the panel/CP.

You can even work with 2 programming devices simultaneously, 2x open the same block, only changes which are stored at last will be finally stored in the PLC. Also ideal for trainings purposes if PLC's with IO's are scare goods.

Multiplexer-devices of the PG-MUX-II-family are the ultimate service-device, regardless of what you plug into the two PG-sockets, both participants communicate parallel with the controller.

Protection for data-dump and modification

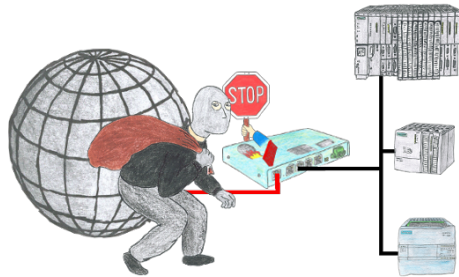


You want to protect your system against unauthorized access and changes? No problem, with the S7-firewall you secure your system against unauthorized access and thus prevent deduction or alteration of your system and process data.

Detect and alarm Profinet burglary




Recognize cable breakage, contact problems and line faults.
Retransmissions and failures are logged and reported.
Early acting before total failure of the participant.

Integrated firewall

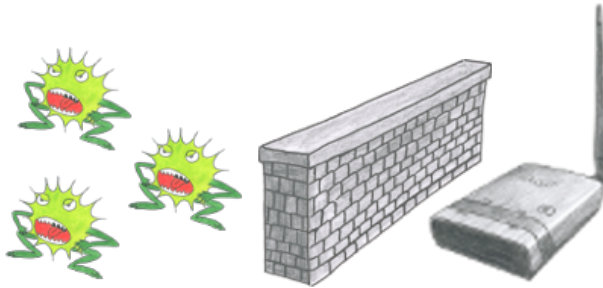

You use ALF as a WLAN-router to connect your PC with the internet. No Problem, this Sie nutzen ALF als WLAN-Router um Ihren PC ins Internet zu bringen. Kein Problem, ALF masters this task without problems. Its built-in firewall ensures that no hacker from outside changes your configuration or moves in your network.

PLC coupling (data exchange between PLC-devices)

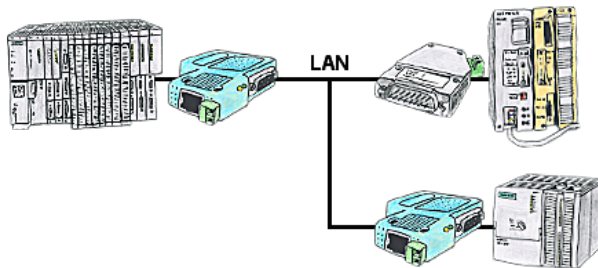

Your pumping stations report the water levels of the central control via telephone network. The central office itself can of course transmit commands/messages to the substations as well. Thereto no dedicated line is required, it's sufficient when the stations connect via network (DSL-router).